



## BU-300™

## Unpacking

Thank you for purchasing the BU-300™ by American DJ®. Every BU-300™ has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect your unit for any damage and be sure all equipment necessary to operate the system has arrived intact. In the event damage has been found or parts are missing, please contact our toll free customer support number for further instructions. Please do not return the unit to your dealer without first contacting customer support.

## BU-300™

## Introduction

### Customer Support:

American DJ® provides a toll free customer support line, to provide set up help and to answer any question should you encounter problems during your set up or initial operation. You may also visit us on the web at [www.americandj.com](http://www.americandj.com) for any comments or suggestions. For service related issue please contact American DJ®. Service Hours are Monday through Friday 9:00 a.m. to 5:00 p.m. Pacific Standard Time.

Voice: (800) 322-6337

Fax: (323) 582-2610

E-mail: [support@americandj.com](mailto:support@americandj.com)

**Warning!** To prevent or reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture.

**Caution!** There are no user serviceable parts inside this unit. Do not attempt any repairs yourself, doing so will void your manufacturer warranty. In the unlikely event your unit may require service please contact your nearest American DJ dealer.

**PLEASE do not discard the shipping carton in the trash. Please recycle when ever possible.**

**Safety Issues:** This unit may blow a fuse if the maximum allotted load of 10 amps is reached. If the fuse needs replacement, always replace the fuse with same exact type that was remove, unless otherwise instructed by an authorized American DJ® service technician. Use of a different type fuse from that which is recommended may cause fire or electric shock and will void the manufactures warranty.



## User Instructions

*American DJ*

4295 Charter Street

Los Angeles Ca. 90058

[www.americandj.com](http://www.americandj.com)

**CAUTION**

TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE CAREFULLY INSERTED TO PREVENT BLADE EXPOSURE.



**CAUTION**  
Do not open -  
Risk of electric shock



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER RACK. THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER SERVICE TO YOUR AUTHORIZED AMERICAN DJ/AUDIO DEALER.

The lightning flash with an arrow triangular symbol is intended to alert the user to the presence of non insulated "dangerous voltage" within the products enclosure, and may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point triangular symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the user manual accompanying the CD player.

Please record and retain the model name and serial number from your rating label.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

- Keep the outside of this device dry at all times. Do not spill water or other liquids into or on to your unit. Be sure all bubble juice is kept inside the fluid tray! To prevent fire or shock hazard, do not expose this product to rain or moisture.
- Be sure to save the packing carton in case you may ever have to return the unit for service.
- This unit is designed for interior use only. Do not use this unit outdoors.
- Be sure that the local power outlet match that of the required voltage for your unit.
- Do not attempt to operate this unit if the power cord has been frayed or broken.
- Always route your power cord out of the way of foot traffic.
- Do not attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in the rare case of an internal short.
- Disconnect from main power before filling the fluid reservoir.
- Do not remove the cover under any conditions. There are no user serviceable parts inside.
- Disconnect the unit's main power when left unused for long periods of time.
- Never connect this unit to a dimmer pack
- Always be sure to mount this unit in an area that will allow proper ventilation. Allow about 6" (15cm) between this device and a wall.
- Never block the ventilation holes.
- Do not attempt to operate this unit, if it becomes damaged in any way.
- Never operate this unit when it's cover is removed.
- This unit is for adult use only. Keep out of the reach of children.

Please carefully read and understand the instructions in this manual thoroughly before attempting to operate this unit. These instructions contain important safety information regarding the use and maintenance of this unit. Please keep this manual with the unit, for future reference.

- High velocity fan
- Easy accessible fluid tray
- High bubble output
- Light weight
- Low current draw
- Hanging yoke.
- On/Off power switch
- One tank makes hundreds of bubbles

The Wild Flower II™ carries a 90 day limited warranty. Please fill out the enclosed warranty card to validate your purchase. All returned service items whether under warranty or not, must be freight pre-paid and accompany a return authorization (R.A.) number. If the unit is under warranty you must provide a copy of your proof of purchase invoice. Please contact American DJ® customer support for a R.A. number.

**Power Supply:** Before plugging your unit in, be sure the source voltage in your area matches the required voltage for your American DJ® BU-300™ before attempting operation.

**Filling the Tank Reservoir:**

1. Place the BU-300™ on a flat level surface.
2. Loosen the four thumb screws on either side of the unit.
3. Pull the BU-300™ straight up by the hanging bracket. This will expose the fluid reservoir.
4. Using premium American DJ® brand bubble juice, fill the fluid reservoir.
5. Once the reservoir has been filled, collapse the unit hosing to a closed position and tighten the thumb screws.

**Operation:**

Once the tank has been filled. You may place the unit on flat level surface or hang the unit in a level position. Press the power switch to on position and watch the bubbles come out by the hundreds.

**Caution:** Always replace with the exact same type fuse, unless otherwise specified by an authorized American DJ® technician. Replacing with anything other than the specified part can damage your unit and will void your manufactures warranty.

**Warning:** If after you have replaced the fuse, you continue to blow fuses, STOP using the unit. Contact customer support for further instructions, you may have to return the unit for servicing. Continuing to use the unit may cause serious damage.

**Fuse Replacement:**

Disconnect the unit's main power supply. Insert a standard flat head screw driver in to the fuse holder housing. Turn the screwdriver in counter-clockwise direction to remove the fuse holder. Remove the fuse holder to expose the fuse. Remove the old fuse and discard it. Replace the fuse with the same type. Insert the fuse holder back into it's housing and turn it in clockwise direction to lock the holder in place.

**For any service related issues, please contact American DJ® customer support.**

**90 DAY LIMITED WARRANTY**

- A. American DJ® hereby warrants, to the original purchaser, American DJ® products to be free of manufacturing defects in material and workmanship for a period of 90 days from the date of purchase. This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.
- B. For warranty service, send the product only to the American DJ® factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, American DJ® will pay return shipping charges only to a designated point within the United States. If the entire instrument is sent, it must be shipped in its original package. No accessories should be shipped with the product. If any accessories are shipped with the product, American DJ® shall have no liability whatsoever for loss of or damage to any such accessories, nor for the safe return thereof.
- C. This warranty is void if the serial number has been altered or removed; if the product is modified in any manner which American DJ® concludes, after inspection, affects the reliability of the product; if the product has been repaired or serviced by anyone other than the American DJ® factory unless prior written authorization was issued to purchaser by American DJ®, if the product is damaged because not properly maintained as set forth in the instruction manual.
- D. This is not a service contract, and this warranty does not include maintenance, cleaning or periodic check-up. During the period specified above, American DJ® will replace defective parts at its expense, and will absorb all expenses for warranty service and repair labor by reason of defects in material or workmanship. The sole responsibility of American DJ® under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of American DJ®. All products covered by this warranty were manufactured after January 1, 1990, and bear identifying marks to that effect.
- E. American DJ® reserves the right to make changes in design and/or improvements upon its products without any obligation to include these changes in any products theretofore manufactured.
- F. No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with products described above. Except to the extent prohibited by applicable law, all implied warranties made by American DJ® in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty period set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said period has expired. The consumer's and/or Dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall American DJ® be liable for any loss or damage, direct or consequential, arising out of the use of, or inability to use, this product.
- G. This warranty is the only written warranty applicable to American DJ® Products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.
- H. Lamps are not covered under this or any other warranty either written or implied.

**MODEL: BU-300™**

**SPECIFICATIONS:**

**POWER:**

120V~60Hz / 220V~50Hz

**DIMENSIONS:**

12.5" H x 7.5" W x 9" D  
(Tray Closed)

**WEIGHT:**

5 LBS / 3.5 KGS.

**FUSE:**

2 AMP GMA

**WORKING POSITION:**

ANY SAFE POSITION

**COOLING:**

FAN COOLED

**DUTY CYCLE:**

NONE

**Please Note:** Specifications and improvements in the design of this unit and this manual are subject to change without any prior written notice.