

American DJ®

User Instructions

MADE IN THE
U.S.A.

Chameleon™

HALOGEN LAMP WARNING!


This fixture is fitted with halogen lamps which are highly susceptible to damage if improperly handled. Never touch lamp with bare fingers as the oil from your hands will shorten lamp life. Also, never move fixture until lamp has had ample time to cool. Remember, lamps are not covered under warranty conditions.

Caution! Always disconnect from main power before replacing lamps or servicing unit. Remember to always replace with same lamps and fuses.

Model: Chameleon™

SPECIFICATIONS:

Lamp: ZB-EFP 12V 100W
Power: 110V/60Hz
Optics: High Quality Glass Lens
Ventilation: Conventional
Working Position: Any
Weight: 15 lbs.
Size: 10.25" x 11" x 5.75"

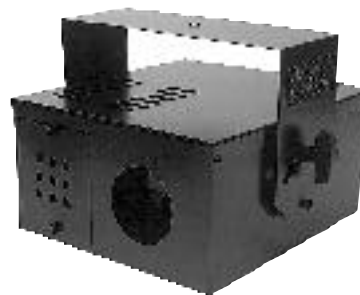

Thank you for purchasing this American DJ® product. For your convenience this lighting effect has been lamped and is ready to be used, there is no assembly required. Please read the following instructions before installing or using your new unit.

Operating Instructions:

Unit is ready to be hung or set on the floor. After plugging in unit, the light will react to the music via its sound active internal microphone. For best results use with fog. The Chameleon™ is a sound active moon flower that spins to the beat of the music. Featuring 9 dichroic colors plus white, and an effects switch which gives either a constant color changing effect or a sound active mode. In the sound active mode, the color wheel changes, creating solid or split beams. This button is located at the back of the unit near the power cord. The Chameleon™ is made in the USA, and has a 1 Year Limited Warranty.

To replace lamp; use easy-access door on the front of the unit. Pull off door, replace bulb and reassemble. Do not forget to unplug unit before replacing bulb!

For service, contact your American DJ® dealer.

American DJ® LOS ANGELES, CA. 90058