

American DJ® CALYPSO



User Instructions

American DJ
4295 Charter Street
Los Angeles Ca. 90058
www.americandj.com

Calypso™

Unpacking

Thank you for purchasing the Calypso™ by American DJ®. Every Calypso™ has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect your unit for any damage and be sure all equipment necessary to operate the system has arrived intact. In the event damage has been found or parts are missing, please contact our toll free customer support number for further instructions. Please do not return the unit to your dealer without first contacting customer support.

Calypso™

Introduction

Customer Support:

American DJ® provides a toll free customer support line, to provide set up help and to answer any question should you encounter problems during your set up or initial operation. You may also visit us on the web at www.americandj.com for any comments or suggestions. For service related issue please contact American DJ®. Service Hours are Monday through Friday 9:00 a.m. to 5:00 p.m. Pacific Standard Time.

Voice: (800) 322-6337
Fax: (323) 582-2610
E-mail: support@americandj.com

Warning! To prevent or reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture.

Caution! There are no user serviceable parts inside this unit. Do not attempt any repairs yourself, doing so will void your manufactures warranty. In the unlikely event your unit may require service please contact your nearest American DJ dealer.

PLEASE do not discard the shipping carton in the trash. Please recycle when ever possible.

Safety Issues: This unit may blow a fuse if the maximum allotted load of 15 amps is reached. If the fuse needs replacement, always replace the fuse with same exact type that was remove, unless otherwise instructed by an authorized American DJ® service technician. Use of a different type fuse from that which is recommended may cause fire or electric shock and will void the manufactures warranty.

Please carefully read and understand the instructions in this manual thoroughly before attempting to operate this unit. These instructions contain important safety information regarding the use and maintenance of this unit. Please keep this manual with the unit, for future reference.

- Keep the outside of this device dry at all times. Do not spill water or other liquids into or on to your unit. To prevent fire or shock hazard, do not expose this product to rain or moisture.
- Be sure to save the packing carton in the event you may have to return the unit for service.
- This unit is designed for interior use only. Do not use this unit out doors. Use of product outdoors will void the warranty.
- Be sure that the local power outlet match that of the required voltage for your unit.
- Do not attempt to operate this unit if the power cord has been frayed or broken.
- Always route your power cord out of the way of foot traffic.
- Do not attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in the rare case of an internal short.
- Disconnect the unit's main power when left unused for long periods of time.
- Always be sure to mount this unit in an area that will allow proper ventilation. Allow about 6" (15cm) between this device and a wall.
- Never block the ventilation holes.
- Do not attempt to operate this unit, if it becomes damaged in any way.
- Never operate this unit when it's cover is removed.
- This unit is for adult use only. Keep out of the reach of children.

This fixture is fitted with halogen lamps which are highly susceptible to damage if improperly handled. Never touch lamp with your bare fingers as the oil from your hands will shorten lamp life. Also, never move the fixture until the lamps have had ample time to cool. Remember, lamps are not covered under warranty conditions.

Introduction: The Calypso™ produces a "Calypso dance" of triangle, colored beams moving to the sound of music via an internal microphone. The unit produces 144 sharp multi-dichroic colored beams of light projected from 48 small lenses. This unit features an internal microphone that allows the beams to be triggered by sound. This fixture is designed to operate as a stand alone unit.

Operating Instructions: This unit has been fitted with lamps at the factory and is ready to go. Plug the unit into a matching power outlet. The unit will react to low frequencies sound via its internal microphone. The audio sensitivity is preset at the factory and can not be adjusted. For best results, we suggest using the unit with fog or special effects smoke. This will make the colored beams of light more visible and enhance the overall effect.

Mounting: When used with included mounting bracket, this unit may be mounted in any safe position or set on a flat stable surface.

Caution! Be sure not to obstruct cooling vents and keep this unit in a well ventilated area. Never open the unit while in use. Avoid touching the lamps, the lamp will get extremely hot under normal usage and may cause serious injury.

Due to fog residue, smoke, and dust, cleaning the internal and external optical lenses must be carried out periodically to optimize light output.

1. Use normal glass cleaner and a soft cloth to wipe down the outside casing.
2. Use a brush to wipe down the fan grill.
3. Clean the external optics with glass cleaner and a soft cloth every 20 days. Situation may vary. If used heavily in clubs with lots of fog, cleaning may be required more often.
4. Clean the internal optics with glass cleaner and a soft cloth every 30-60 days.
5. Always be sure to dry all parts completely before plugging the unit in.

Cleaning frequency depends on the environment in which the fixture operates (i.e. smoke, fog residue, dust, dew). Proper cleaning may extend the life of your unit drastically

The Calypso™ carries a 90 day limited warranty. We recommend you fill out the enclosed warranty card to validate your purchase. All returned service items whether under warranty or not, must be freight pre-paid and accompany a return authorization (R.A.) number. If the unit is under warranty, you must provide a copy of your proof of purchase invoice. Please contact American DJ® customer support for a R.A. number.

Calypso™

Lamp Replacement

Lamp Replacement: Caution! Never open the unit while in use. Always disconnect the main power before attempting to replace the lamps. Allow the unit ample time to cool before replacing lamps

1. Be sure to follow the proper procedures when handling halogen bulbs.
2. Remove the thumb screws that retain the upper half of dome to the lower half.
3. Remove the upper half the dome to expose the lamp/socket assembly.
4. Gently remove and discard the bad lamps.
5. Insert the new lamps in the lamp/socket assembly and reassemble.

Remember to always replace with the exact same type lamp and fuse, unless otherwise specified by an authorized American DJ® service technician.

Calypso™

Fuse Replacement

Fuse Replacement: To replace the protective fuse, use a flat head screwdriver to unscrew and remove the fuse holder. Gently remove the old fuse and replace it with a new one. Insert the fuse holder back into the fuse housing and tighten. Always replace with the exact same type fuse removed unless otherwise specified by an authorized American DJ® service technician.

Caution: Always disconnect the units main power before performing any type of service or fuse replacement!

For any other service related issues, please contact American DJ® customer support.

90 DAY LIMITED WARRANTY

A. American DJ® hereby warrants, to the original purchaser, American DJ® products to be free of manufacturing defects in material and workmanship for a period of 90 days from the date of purchase. This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.

B. For warranty service, send the product only to the American DJ® factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, American DJ® will pay return shipping charges only to a designated point within the United States. If the entire instrument is sent, it must be shipped in its original package. No accessories should be shipped with the product. If any accessories are shipped with the product, American DJ® shall have no liability whatsoever for loss of or damage to any such accessories, nor for the safe return thereof.

C. This warranty is void if the serial number has been altered or removed; if the product is modified in any manner which American DJ® concludes, after inspection, affects the reliability of the product; if the product has been repaired or serviced by anyone other than the American DJ® factory unless prior written authorization was issued to purchaser by American DJ®; if the product is damaged because not properly maintained as set forth in the instruction manual.

D. This is not a service contract, and this warranty does not include maintenance, cleaning or periodic check-up. During the period specified above, American DJ® will replace defective parts at its expense, and will absorb all expenses for warranty service and repair labor by reason of defects in material or workmanship. The sole responsibility of American DJ® under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of American DJ®. All products covered by this warranty were manufactured after January 1, 1990, and bear identifying marks to that effect.

E. American DJ® reserves the right to make changes in design and/or improvements upon its products without any obligation to include these changes in any products theretofore manufactured.

F. No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with products described above. Except to the extent prohibited by applicable law, all implied warranties made by American DJ® in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty period set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said period has expired. The consumer's and or Dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall American DJ® be liable for any loss or damage, direct or consequential, arising out of the use of, or inability to use, this product.

G. This warranty is the only written warranty applicable to American DJ® Products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.

H. Lamps are not covered under this warranty

Technical Specifications:

Model: Calypso™

Lamp:	3 x ZB-EHM -120V 300W
Voltage:	110v~120v / 60Hz
Dimensions:	17" x 12" x 6"
Colors	Multi-Dichroic
Weight:	11 Lbs.
Fuse:	15 Amp AGC
Duty Cycle:	10 min. ON/ 10 min. OFF
Lenses:	48 Dichroic/Multi-Colred
Sound Active:	Yes
Working Position:	Any Safe position

Please Note: Specifications and improvements in the design of this unit and this manual are subject to change without any prior written notice.

©American DJ Supply
American DJ World Headquarters:
4295 Charter Street Los Angeles, CA 90058 USA
Tel: 323-582-2650 / Fax: 323-582-2610
Web: www.americandj.com / E-mail: info@americandj.com