

CONCEPT:1

LAMP REPLACEMENT

This fixture is fitted with halogen lamps which are highly susceptible to damage if improperly handled. Never touch the lamps with your bare fingers as the oil from your hands will shorten lamp life. Also, never move the fixture until the lamps have had ample time to cool. Remember, lamps are not covered under warranty conditions.

Lamp Replacement: Caution! *Never open the unit when in use. Always disconnect the main power before attempting to replace the lamp.* Remember always replace with the same type lamp.

1. Be sure to follow the proper procedures when handling halogen bulbs.
2. Unscrew and remove the four allen screws on the top cover of the body. (Diagram 1)
3. Unscrew and remove the two phillips screws at the bottom. Remove the body shell. (Diagram 2)
4. Unscrew and remove the two phillips screws located directly below the gobo wheel and color wheel. (Diagram 3)
5. Remove the lamp cover.
6. Remove and replace the bulb. (Diagram 4)
7. Reassemble.


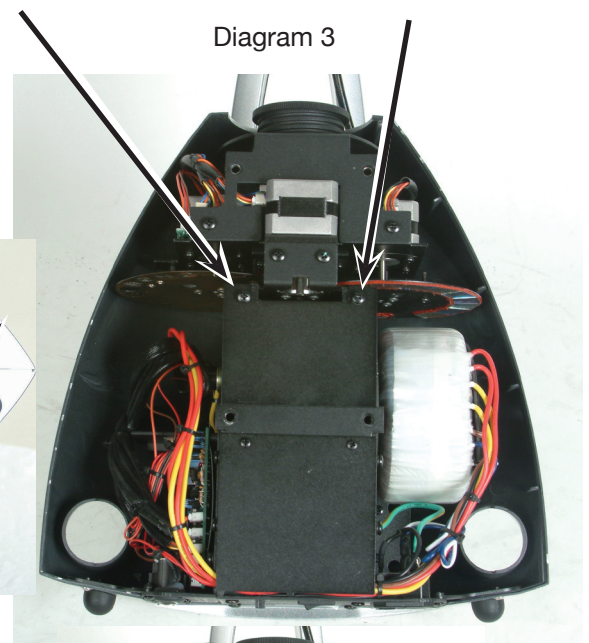


Diagram 4

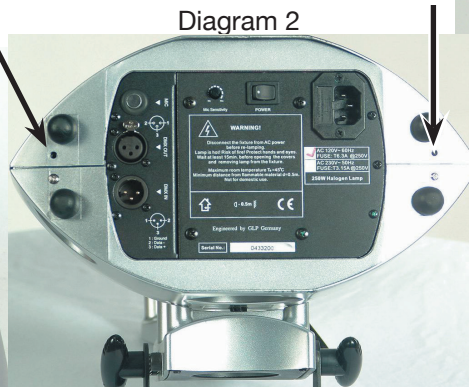