

Eliminator[®]

LIGHTING

Electro Panel 192



SPECIFICATIONS:

| | |
|--------------------------------|--|
| Model: | Electro Panel 192 |
| LEDs: | 192 - 64 Red, 64 Green, & 64 Blue |
| Weight: | 4.6lbs./ 2.1kgs. |
| Size: | 7.12" (H) x 12.41" (W) x 4.5" (D) |
| Fuse: | 7 Amp |
| Supply Voltage: | 120V |
| Power Cord Daisy Chain: | 33 Fixtures Max. |
| Working Position: | Any Safe position |
| Duty Cycle: | None |
| DMX Channels: | 6 DMX Channel Modes: 1, 2, 3, 4, 6, or 7 DMX Channels |
| Colors: | Multiple Colors |
| Warranty: | 1 Year |

CAUTION! Please read and understand these instructions before installing or operating this unit.

Operating Instructions:

The Electro Panel 192 has been tested at the factory, there is no assembly required. The unit is ready to be plugged into a power outlet. This unit is a 7 channel DMX intelligent LED par can. It can be run as a stand-alone, static unit DMX controlled unit, or in a Master/Slave configuration. While in Stand Alone or a Master/Slave configuration, you can run the auto mode. For stand-alone mode, and Master/Slave configuration settings, see other side.

Power Cord Daisy Chaining: With this feature you can connect the fixtures to one another using the IEC input and output sockets. The quantity that can be connected is 33 fixtures maximum. After 33 fixtures you will need to use a new power outlet. They must be the same fixtures. DO NOT mix fixtures.

1 Year Limited Warranty: Eliminator Lighting warranty is valid from the date of purchase. Our 1 year limited warranty covers manufacturing defects only. Serial number, place of purchase with dated valid receipt must be submitted at time of service. Eliminator Lighting warranty does not cover items or parts prone to wear and tear: lamps, fuses, brushes and belts. Eliminator Lighting warranty is only valid with-in the United States.

Caution! Never open unit when in use. Always disconnect main power before replacing fuse. Remember to always replace with the exact same type fuse.

ADDR - DMX Address Setting.

1. Tap the either the MENU, UP, or DOWN buttons until “ADDR” is displayed, press ENTER.
2. “1” will now be displayed and flashing. Press the UP or DOWN buttons to find your desired address. Press ENTER to set your desired DMX address.

CHND - There are 6 DMX Channel modes to choose from, this will let you switch and select your DMX Channel mode. You can choose from either 1, 2, 3, 4, 6, or 7 DMX Channels. Please see the last page of the DMX values and traits for each DMX Channel Mode.

1. Tap the either the MENU button until “CHND” is displayed, press ENTER.
2. Tap the UP or DOWN buttons to scroll through the different DMX Channel modes. Once you have found your desired DMX Channel mode press ENTER to confirm and exit.

SLND - This will let you set unit as a master or slave in a master/slave configuration.

1. Tap the either the MENU button until “SLND” is displayed, press ENTER. “MSTR”, “SL 1” or “SL 2” will be displayed.
2. Tap the UP or DOWN buttons until your desired setting is displayed, press ENTER to confirm and exit.

SHND - in this mode you can choose and run one of 11 preprogrammed shows.

1. Tap the either the MENU button until “SHND” is displayed, press ENTER.
2. Tap the UP or DOWN buttons to scroll through 11 preprogrammed shows.
3. Select your desired show by pressing the ENTER button to confirm and exit.

BRII - in this mode you can set the brightness/intensity of the fixture.

1. Tap the either the MENU button until “BRII” is displayed, press ENTER.
2. Tap the UP or DOWN buttons to adjust the brightness (0-255). A setting of 0 will not produce any light output
3. Select your desired intensity by pressing the ENTER button to confirm and exit.

STRO - in this mode you can activate and set the strobe rate.

1. Tap the either the MENU button until “STRO” is displayed, press ENTER.
2. Tap the UP or DOWN buttons to adjust the stobe rate (0-255). A setting of 0 will deactivate the strobe feature.
3. Select your desired strobe rate by pressing the ENTER button to confirm and exit.

BLND - Blackout or Stand by mode.

1. Tap the either the MENU button until “BLND” is displayed, press ENTER. Either Yes or No will be displayed.

2. To activate Blackout tap the UP or DOWN buttons until Yes is displayed, press ENTER to confirm and exit. The fixture will now be in Blackout mode. To deactivate Blackout mode, select No and press Enter.

LED - With this function you can switch the lamp on or off via the control board.

1. Tap the either the MENU button until "LED" is displayed, press ENTER.
2. The display will show either "ON" or "OFF". Press the UP or DOWN buttons to select "ON" to switch on the LED, or "OFF" to switch off the LED.
3. Press ENTER to confirm and exit.

IDSP - This function will reverse the display 180°.

1. Tap the either the MENU button until "IDSP" is displayed, press ENTER.
2. Tap the UP button until "FLIP" is displayed.
3. Press ENTER, the display will show "ON/OFF".
4. Press the UP button to select "ON" to activate this function, or "OFF" to deactivate this function.
5. Press ENTER to confirm.

FHRS - With this function you can display the running time of the unit.

1. Tap the either the MENU button until "FHRS" is displayed, press ENTER.
2. The display shows the running time of the unit. Press MENU to exit.

VER - Use this function to display the Software version of the unit.

1. Tap the either the MENU button until "VER" is displayed, press ENTER.
2. The display will show the software version.

| 1 Channels | 2 Channels | | 3 Channels | | | 4 Channels | | | |
|---|---|--------|------------|-------|------|------------|-------|------|--------|
| Ch1 | Ch1 | Ch2 | Ch1 | Ch2 | Ch3 | Ch1 | Ch2 | Ch3 | Ch4 |
| Program/Macro | Program/Macro | Dimmer | Red | Green | Blue | Red | Green | Blue | Dimmer |
| 000-010=Open 011-021=Red 022-032=Yellow 033-043=Green 044-054=Cyan 055-065=Blue 066-076=Purple 077-087=White 088-098=Magenta 099-109=Macro1 0110-120=Macro2 121-131=Macro3 132-142=Macro4 143-153=Macro5 154-164=Macro6 165-175=Macro7 176-186=Macro8 1187-197=Macro9 198-208=Macro10 209-219=Macro11 220-230=Macro12 231-255=Sound Active | 000-010=Open 011-021=Red 022-032=Yellow 033-043=Green 044-054=Cyan 055-065=Blue 066-076=Purple 077-087=White 088-098=Magenta 099-109=Macro1 0110-120=Macro2 121-131=Macro3 132-142=Macro4 143-153=Macro5 154-164=Macro6 165-175=Macro7 176-186=Macro8 1187-197=Macro9 198-208=Macro10 209-219=Macro11 220-230=Macro12 231-255=Sound Active | | | | | | | | |

| 6 Channels | | | | | |
|------------|-------|------|---|--------------------|--------|
| Ch1 | Ch2 | Ch3 | Ch4 | Ch5 | Ch6 |
| Red | Green | Blue | Program/Macro | Program Strobe | Dimmer |
| | | | 000-010=Open 011-021=Red 022-032=Yellow 033-043=Green 044-054=Cyan 055-065=Blue 066-076=Purple 077-087=White 088-098=Magenta 099-109=Macro1 0110-120=Macro2 121-131=Macro3 132-142=Macro4 143-153=Macro5 154-164=Macro6 165-175=Macro7 176-186=Macro8 1187-197=Macro9 198-208=Macro10 209-219=Macro11 220-230=Macro12 231-255=Sound Active | When CH4=0-098 | |

| 7 Channels | | | | | | |
|------------|-------|------|---|----------------------|----------------------|--------|
| Ch1 | Ch2 | Ch3 | Ch4 | Ch5 | Ch6 | Ch7 |
| Red | Green | Blue | Program/Macro | Macro Speed | Program Strobe | Dimmer |
| | | | 000-010=Open 011-021=Red 022-032=Yellow 033-043=Green 044-054=Cyan 055-065=Blue 066-076=Purple 077-087=White 088-098=Magenta 099-109=Macro1 0110-120=Macro2 121-131=Macro3 132-142=Macro4 143-153=Macro5 154-164=Macro6 165-175=Macro7 176-186=Macro8 1187-197=Macro9 198-208=Macro10 209-219=Macro11 220-230=Macro12 231-255=Sound Active | When CH4=099-230 | When CH4=011-098 | |