

7 CH	9 CH	11 CH	VALUES	FUNCTIONS
1	1	1	000-255	PAN MOVEMENT (8-BIT) 0-100% (0°-540°)
	2	2	000-255	PAN FINE (16-BIT)
2	3	3	000-255	TILT MOVEMENT (8-BIT) 0-100% (0°-200°)
	4	4	000-255	TILT FINE
		5		SHUTTER & STROBING
			000-031	LED OFF
			032-063	LED ON
			064-095	STROBING SLOW-FAST
			096-127	LED ON
			128-159	PULSE STROBING
			160-191	LED ON
			192-223	RANDOM STROBING SLOW-FAST
			224-255	LED ON
3	5	6	000-255	PRIMARY DIMMER 0~100%
4	6	7	000-255	PRIMARY DIMMER FINE 0~100%
5	7	8	000-255	ZOOM 10°-40°
		9		DIMMER MODES
			000-020	STANDARD
			021-040	STAGE
			041-060	TV
			061-080	ARCHITECTURAL
			081-100	THEATRE
			101-120	STAGE 2
			121-140	DIMMER SPEED FAST-SLOW (0.1-10S)
			141-255	DEFAULT TO UNIT SETTING
6	8	10	000-255	PAN/TILT MOVEMENT SPEED SLOW-FAST
7	9	11		SPECIAL FUNCTIONS
			000-069	NO FUNCTION
			070-079	BLACKOUT WITH PAN/TILT MOVEMENT ENABLED
			080-089	BLACKOUT WITH PAN/TILT MOVEMENT DISABLED
			090-099	RESET ALL
			100-109	RESET ZOOM
			110-119	RESET PAN/TILT
			120-255	NO FUNCTION