

Par Z Move RGBW

DMX Modes & Values

13 CH	15 CH	16 CH	VALUES	FUNCTIONS
1	1	1	000-255	PAN MOVEMENT (8-BIT) 0-100% (0°-540°)
	2	2	000-255	PAN FINE (16-BIT)
2	3	3	000-255	TILT MOVEMENT (8-BIT) 0-100% (0°-200°)
	4	4	000-255	TILT FINE (16-BIT)
3	5	5	000-255	RED 0-100%
4	6	6	000-255	GREEN 0-100%
5	7	7	000-255	BLUE 0-100%
6	8	8	000-255	WHITE 0-100%
7	9	9		VARIABLE WHITE COLOR TEMPERATURE
			000-005	No Function
			006-019	3000K
			020-084	3200K
			085-116	4000K
			117-149	4500K
			150-179	5000K
			180-209	5500K
			210-255	6000K
8	10	10		SHUTTER & STROBING
			000-031	LED OFF
			032-063	LED ON
			064-095	STROBING SLOW-FAST
			096-127	LED ON
			128-159	PULSE EFFECT IN SEQUENCES
			160-191	LED ON
			192-223	RANDOM STROBING SLOW-FAST
			224-255	LED ON
9	11	11	000-255	MASTER DIMMER 0-100%
10	12	12	000-255	DIMMER FINE 0-100%
11	13	13	000-255	ZOOM 9°-37°

13 CH	15 CH	16 CH	VALUES	FUNCTIONS
		14		DIMMER MODES
			000-020	Standard
			021-040	Stage
			041-060	TV
			061-080	Architectural
			081-100	Theatre
			101-120	Stage 2
				DIMMER DELAY TIME
			121	0.1Sec.
			122	0.2Sec.
			123	0.3Sec.
			124	0.4Sec.
			125	0.5Sec.
			126	0.6Sec.
			127	0.7Sec.
			128	0.8Sec.
			129	0.9Sec.
			130	1.0Sec.
			131	1.5Sec.
			132	2.0Sec.
			133	3.0Sec.
			134	4.0Sec.
			135	5.0Sec.
			136	6.0Sec.
			137	7.0Sec.
			138	8.0Sec.
			139	9.0Sec.
			140	10Sec.
			141-255	Default to Unit Setting
12	14	15	000-255	PAN/TILT MOVEMENT SPEED Slow - Fast
13	15	16		SPECIAL FUNCTIONS
			000-010	Default LED Refresh Rate (1200Hz)
			011-020	900Hz Refresh Rate
			021-030	1000Hz Refresh Rate
			031-040	1100Hz Refresh Rate
			041-050	1300Hz Refresh Rate
			051-060	1400Hz Refresh Rate
			061-070	1500Hz Refresh Rate
			071-080	Disable LED Refresh Rate
			081-090	Enable Blackout w/ Pan/Tilt Movement
			091-100	Disable Blackout w/ Pan/Tilt Movement
			101-110	Reset All
			111-120	Reset Zoom
			121-130	Reset Pan/Tilt
			131-255	No Function