



User Instructions



QuatroTM

CAUTION! Read instructions before installing or plugging unit in.

SPECIFICATIONS: MODEL - QuatroTM

Weight: 5 lbs.
Size: 7" H x 5"D x 16"W
Lamp: 4 x ZB-EXN 12V 50W
Fuse: 3A
Voltage In: 120V
Working Position: Any Safe position
Duty Cycle: None
Colors: Comes clear, can be colored using a paper gel material.

HALOGEN LAMP WARNING!

This fixture is fitted with halogen lamps which are highly susceptible to damage if improperly handled. Never touch lamp with bare fingers as the oil from your hands will shorten lamp life. Also, never move fixture until lamp has had ample time to cool. Remember, lamps are not covered under warranty conditions.

Thank you for purchasing the QUATROTM by American DJTM. For your convenience the QUATROTM has been lamped and is ready to be used; there is no assembly required. Please read the following instructions before installing or using your new QUATROTM.

Operating Instructions:

Unit is ready to be hung or set on flat surface. The QuatroTM has two dials at the back of the unit which allow sound level or sensitivity adjustment and speed control. The knob left of the 3 position switch is the sensitivity knob. Turn knob counterclockwise for higher sensitivity. The knob right of the 3 position switch is the speed control knob, turn clockwise for faster chase. Between the two knobs is a 3 position switch. Position 1- (Lowest setting) "Off", Position 2 - (middle setting) "Chase" Position 3 - (Top setting) "Sound Activation". Angle the cans in any direction. Cans can be colored using a high temp gel paper.

Caution! Never open unit when in use. Always disconnect main power before servicing or replacing lamp. Remember, always replace with the same lamp and fuse.

Lamp replacement: Disconnect power. Remove unit back and disconnect lamp from socket. Remove and replace lamp. Service only at *American DJTM*.