


Eliminator[®]

LIGHTING

Mirage LED

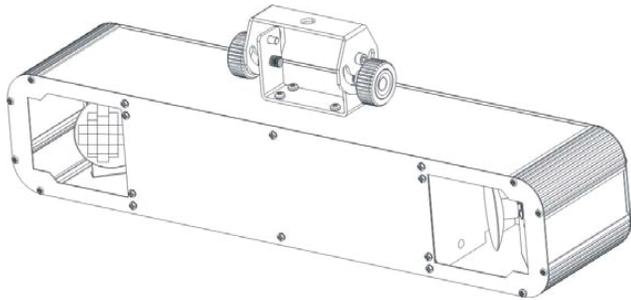

SPECIFICATIONS:

Model:	Mirage LED
Supply Voltage:	100~240V 50/60Hz
LEDs:	8 LEDs - 2 Red, 2 Green, 2 Blue, & 2 White
Weight:	10.5lbs./ 4.8kgs.
Size:	22.8" (L) x 5.8" (W) x 4.5" (H)
Fuse:	6.3 Amp
Power Cord Daisy Chain:	9 Fixtures Max.
Working Position:	Any Safe position
Duty Cycle:	None
DMX Channels:	6 DMX Channels
Colors:	RGBW
Warranty:	1 Year

CAUTION! Please read and understand these instructions before installing or operating this unit.

Caution! Never open unit when in use. Always disconnect main power before replacing fuse. Remember to always replace with the exact same type fuse.

Operating Instructions:

The Mirage LED has been tested at the factory, there is no assembly required. The unit is ready to be plugged into a power outlet. This unit is a 6 channel DMX intelligent LED par can. The Mirage LED has three operating modes; Sound Active mode, Show mode, or as a DMX controlled unit. The unit can run as a stand alone fixture or in a Master/Slave configuration.

Power Cord Daisy Chaining: With this feature you can connect the fixtures to one another using the IEC input and output sockets. The quantity that can be connected is 9 fixtures maximum. After 9 fixtures you will need to use a new power outlet. They must be the same fixtures. **DO NOT** mix fixtures.

ADDR - DMX Address Setting.

1. Tap the either the MENU, UP, or DOWN buttons until “**ADDR**” is displayed, press ENTER.
2. “**1**” will now be displayed and flashing. Press the UP or DOWN buttons to find your desired address. Press ENTER to set your desired DMX address.

SLND - This will let you set unit as a slave in a master/slave configuration.

1. Tap the either the MENU button until “**SLND**” is displayed, press ENTER. “**SL 1**” or “**SL 2**” will be displayed.
2. Tap the UP or DOWN buttons until your desired setting is displayed, press ENTER to confirm and exit.

SHND: SH 0 - SH 8 - Show modes 0 - 8 & Manual show. Show mode can run with or without sound active mode on.

1. Press the MENU button until “**SHND**” is displayed, press ENTER.
2. “**SH X**” will now be displayed, “**X**” representing a number between 0-8 will be displayed. Shows 1-8 are preset shows, while “**SH 0**” is random show. Press the UP or DOWN buttons to find your desired show.
3. Once you have found your desired show press ENTER, and then press and hold the MENU button for at least 3 seconds to confirm.

SOUN - In this submenu you can activate sound active mode.

1. Press the MENU button until “**SOUN**” is displayed, press ENTER.
2. Either “**ON**” or “**OFF**” will now be displayed. Press the UP or DOWN buttons to select one or the other.
3. When you have made your selection, press the ENTER, and then press and hold the MENU button for at least 3 seconds to confirm.

SENS - Sound sensitivity control.

1. Press the MENU button until “**SENS**” is displayed, press ENTER.
2. The display will show a number between 0-100. Press the UP or DOWN buttons to adjust the sound sensitivity. 0 being the least sensitive and 100 the most sensitive.
3. Press the ENTER, and then press and hold the MENU button for at least 3 seconds to confirm.

BLND - Blackout or Stand by mode.

1. Tap the either the MENU button until “**BLND**” is displayed, press ENTER. Either Yes or No will be displayed.
2. To activate Blackout tap the UP or DOWN buttons until Yes is displayed, press ENTER to confirm and exit. The fixture will now be in Blackout mode. To deactivate Blackout mode, select No and press Enter.

LED - With this function you can have the LED display turn off after 10 seconds.

1. Press the MENU button until “**LED**” is displayed, press ENTER.
2. The display will show either “**ON**” or “**OFF**”. Press the UP or DOWN buttons to select “**ON**” to keep the LED display on at all times, or “**OFF**” to switch to have the LED display switch off after 10 seconds. To make the display reappear, press and hold the MENU button for at least 5 secs.
3. Press ENTER to confirm. To make the display reappear, press and hold the MENU button for at least 5 secs.

DISP - This will “flip” the LED display

1. Press the MENU button until “**DISP**” is displayed, press ENTER.
2. When “**DISP**” is displayed the LED display will remain normal, when “**DSIP**” is displayed, the LED display will be “flipped”. Use the ENTER button to find your desired display set up, then press MENU to confirm and exit.

TEST - This function will run a self test program.

1. Press the MENU button until “**TEST**” is displayed, press ENTER.
2. The fixture will now run a self test. Press the MENU button to exit.

FHRS - With this function you can display the running time of the unit.

1. Tap the either the MENU button until “**FHRS**” is displayed, press ENTER.
2. The display shows the running time of the unit. Press MENU to exit.

VER - Use this function to display the Software version of the unit.

1. Tap the either the MENU button until “**VER**” is displayed, press ENTER.
2. The display will show the software version.

REST - This function will reset the unit to its factory settings.

1. Press the MENU button until “**REST**” is displayed, press ENTER.
2. The fixture will now reset itself. Press the MENU button to exit.

1 Year Limited Warranty: Eliminator Lighting warranty is valid from the date of purchase. Our 1 year limited warranty covers manufacturing defects only. Serial number, place of purchase with dated valid receipt must be submitted at time of service. Eliminator Lighting warranty does not cover items or parts prone to wear and tear: lamps, fuses, brushes and belts. Eliminator Lighting warranty is only valid with-in the United States.

DMX TRAITS: 6 CHANNELS

CHANNEL 1: DIMMER/STROBE

0 - 7 = NO FUNCTION
8 - 199 = DIMMIG 0% - 100%
200 - 247 = STROBING SLOW - FAST
248 - 255 = OPEN

CHANNEL 2: COLOR

0 - 15 = BLACKOUT
16 - 31 = RED
32 - 47 = GREEN
48 - 63 = BLUE
64 - 79 = WHITE
80 - 95 = RED & GREEN
96 - 111 = RED & BLUE
112 - 127 = RED & WHITE
128 - 143 = GREEN & BLUE
144 - 159 = GREEN & WHITE
160 - 175 = WHITE & BLUE
176 - 191 = RED & GREEN & BLUE
192 - 207 = RED & GREEN & WHITE
208 - 223 = RED & BLUE & WHITE
224 - 239 = GREEN & BLUE & WHITE
240 - 255 = RED & GREEN & BLUE & WHITE

CHANNEL 3: MIRROR ROTATION

0 - 9 = NO ROTATION
10 - 120 = ROTATION FAST - SLOW
121 - 134 = NO ROTATION
135 - 245 = ROTATION SLOW - FAST
246 - 255 = NO ROTATION

DMX TRAITS: 6 CHANNELS

CHANNEL 4: DIMMER/STROBE

0 - 7 = NO FUNCTION
8 - 199 = DIMMIG 0% - 100%
200 - 247 = STROBING SLOW - FAST
248 - 255 = OPEN

CHANNEL 5: COLOR (RIGHT MIRROR)

0 - 15 = BLACKOUT
16 - 31 = RED
32 - 47 = GREEN
48 - 63 = BLUE
64 - 79 = WHITE
80 - 95 = RED & GREEN
96 - 111 = RED & BLUE
112 - 127 = RED & WHITE
128 - 143 = GREEN & BLUE
144 - 159 = GREEN & WHITE
160 - 175 = WHITE & BLUE
176 - 191 = RED & GREEN & BLUE
192 - 207 = RED & GREEN & WHITE
208 - 223 = RED & BLUE & WHITE
224 - 239 = GREEN & BLUE & WHITE
240 - 255 = RED & GREEN & BLUE & WHITE

CHANNEL 6: MIRROR ROTATION

0 - 9 = NO ROTATION
10 - 120 = ROTATION FAST - SLOW
121 - 134 = NO ROTATION
135 - 245 = ROTATION SLOW - FAST
246 - 255 = NO ROTATION