

American DJ® UC3 Foot Controller

Thank you for purchasing this American DJ® product. Please read the user instructions before using your new UC3 Foot Controller.

The UC3 Foot Controller has 3 different modes. Please see your fixtures user manual for the UC3 functions.

- STAND BY will activate the blackout function.
- The MODE selection will run the different modes of the unit, e.g. fast/slow, audio/manual/auto.
- The FUNCTION selection can be activate a wide variety of effects, strobe, X/Y moving pattern, gobo or color change, dimmer, etc. Functions vary with different fixtures.

Caution! No user serviceable parts inside do not attempt repairs. In the event your UC3 Foot Controller should fail, contact *AmericanDJ®*.

Customer Support: American DJ® provides a toll free customer support line, to provide set up help and to answer any question should you encounter problems during your set up or initial operation. You may also visit us on the web at www.americandj.com for any comments or suggestions. Service Hours are Monday through Friday 9:00 a.m. to 4:30 p.m. Pacific Standard Time.

Voice: (800) 322-6337 Fax: (323) 582-2941 E-mail: support@americandj.com

The UC3 Foot Controller carries a 1 year (365 days) limited warranty. Please fill out the enclosed warranty card to validate your purchase. All returned service items whether under warranty or not, must be freight pre-paid and accompany a return authorization (R.A.) number. If the remote is under warranty you must provide a copy of your proof of purchase invoice. Please contact American DJ® customer support for a R.A. number.