

# HEXCON L

## User Manual

©2025 ADJ Products, LLC all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. ADJ Products, LLC logo and identifying product names and numbers herein are trademarks of ADJ Products, LLC. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-ADJ Products, LLC brands and product names are trademarks or registered trademarks of their respective companies.

**ADJ Products, LLC** and all affiliated companies hereby disclaim any and all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or as a result of the improper, unsafe, insufficient and negligent assembly, installation, rigging, and operation of this product.

Europe Energy Saving Notice

Energy Saving Matters (EuP 2009/125/EC)

Saving electric energy is a key to help protecting the environment. Please turn off all electrical products when they are not in use. To avoid power consumption in idle mode, disconnect all electrical equipment from power when not in use. Thank you!

## DOCUMENT VERSION



Due to additional product features and/or enhancements, an updated version of this document may be available online.

Please check [www.adj.com](http://www.adj.com) for the latest revision/update of this manual before beginning installation and/or programming.

| Date       | Document Version | Software Version | DMX Channels   | Notes           |
|------------|------------------|------------------|----------------|-----------------|
| 05/13/2025 | 1.0              | 1.0              | Not Applicable | Initial Release |
|            |                  |                  |                |                 |
|            |                  |                  |                |                 |
|            |                  |                  |                |                 |

# CONTENTS

|  |           |
|--|-----------|
| <b>Introduction</b>                                  | <b>4</b>  |
| <b>Limited Warranty (USA Only)</b>                   | <b>5</b>  |
| <b>Warranty Registration   Features</b>              | <b>6</b>  |
| <b>Safety Precautions</b>                            | <b>7</b>  |
| <b>Overview</b>                                      | <b>9</b>  |
| <b>Installation Guidelines</b>                       | <b>10</b> |
| <b>DMX Set Up</b>                                    | <b>11</b> |
| <b>Operation</b>                                     | <b>13</b> |
| <b>Color Button Values</b>                           | <b>15</b> |
| <b>Maintenance Guidelines   Ordering Information</b> | <b>16</b> |
| <b>Dimensional Drawings</b>                          | <b>17</b> |
| <b>Specifications</b>                                | <b>18</b> |
| <b>FCC Statement</b>                                 | <b>19</b> |

# INTRODUCTION

**Unpacking:** Thank you for purchasing the Hexcon L by ADJ Products, LLC. Every device has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to have been damaged, carefully inspect your fixture for any damage and be sure all accessories necessary to operate the unit have arrived intact. In the event that damage has been found or parts are missing, please contact our toll free customer support number for further instructions. Do not return this unit to your dealer without first contacting customer support.

**Introduction:** The HEXCON L is a 36-channel DMX controller that was specifically designed to control ADJ RGBAL+UV) LED fixtures. **This product is intended to be used by professionally trained personnel only and is not suitable for private use.**

**Customer Support:** Contact ADJ Service for any product related service and support needs. Also visit [forums.adj.com](http://forums.adj.com) with questions, comments or suggestions.

**Parts:** To purchase parts online visit:

<http://parts.adj.com> (US)

<http://www.adjparts.eu> (EU)

**ADJ SERVICE USA - Monday - Friday 8:00am to 4:30pm PST**

**Voice: 800-322-6337 | [support@adj.com](mailto:support@adj.com)**

**ADJ SERVICE EUROPE - Monday - Friday 08:30 to 17:00 CET**

**Voice: +31 45 546 85 60 | Fax: +31 45 546 85 96 | [support@adj.eu](mailto:support@adj.eu)**

## **ADJ PRODUCTS LLC USA**

6122 S. Eastern Ave. Los Angeles, CA. 90040

323-582-2650 | [www.adj.com](http://www.adj.com) | [info@adj.com](mailto:info@adj.com)

## **ADJ SUPPLY Europe B.V**

Junostraat 2 6468 EW Kerkrade, The Netherlands

+31 (0)45 546 85 00 | Fax +31 45 546 85 99

[www.adj.eu](http://www.adj.eu) | [info@adj.eu](mailto:info@adj.eu)

## **ADJ PRODUCTS GROUP Mexico**

AV Santa Ana 30 Parque Industrial Lerma, Lerma, Mexico 52000

+52 (728) 282-7070

**WARNING! This unit is intended for indoor use only! Do not expose to rain or moisture!**

**CAUTION!** There are no user serviceable parts inside this unit. Do not attempt any repairs yourself, as doing so will void your manufacturer's warranty. In the unlikely event your unit may require service, please contact ADJ Products, LLC.

*Do not discard the shipping carton in the trash. Please recycle when ever possible.*

# LIMITED WARRANTY (USA ONLY)

- A. ADJ Products, LLC hereby warrants, to the original purchaser, ADJ Products, LLC products to be free of manufacturing defects in material and workmanship for a prescribed period from the date of purchase (see specific warranty period on reverse). This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.
- B. For warranty service, you must obtain a Return Authorization number (RA#) before sending the product back—please contact ADJ Products, LLC Service Department at 800-322-6337. Send the product only to the ADJ Products, LLC factory. All shipping charges must be prepaid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, ADJ Products, LLC will pay return shipping charges only to a designated point within the United States. If the entire instrument is sent, it must be shipped in its original package and packaging material. No accessories should be shipped with the product. If any accessories are shipped with the product, ADJ Products, LLC shall incur no liability whatsoever for loss of or damage to any such accessories, nor for the safe return thereof.
- C. This warranty is void if the product serial number and/or labels are altered or removed; if the product is modified in any manner which ADJ Products, LLC concludes, after inspection, affects the reliability of the product; if the product has been repaired or serviced by anyone other than the ADJ Products, LLC factory unless prior written authorization was issued to purchaser by ADJ Products, LLC; if the product is damaged because it was not properly maintained as set forth in the product instructions, guidelines and/or user manual.
- D. This is not a service contract, and this warranty does not include maintenance, cleaning, or periodic check-up. During the period specified above, ADJ Products, LLC will replace defective parts at its expense with new or refurbished parts, and will absorb all expenses for warranty service and repair labor by reason of defects in material or workmanship. The sole responsibility of ADJ Products, LLC under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of ADJ Products, LLC. All products covered by this warranty were manufactured after August 15, 2012, and bear identifying marks to that effect.
- E. ADJ Products, LLC reserves the right to make changes in design and/or improvements upon its products without any obligation to include these changes in any products theretofore manufactured.
- F. No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with products described above. Except to the extent prohibited by applicable law, all implied warranties made by ADJ Products, LLC in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty period set forth above. And all warranties, whether expressed or implied, including warranties of merchantability or fitness, are limited in duration to the warranty period set forth above. The consumer's and/or dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall ADJ Product, LLC be liable for any loss and/or damage, direct and/or consequential arising out of the use of, and/or inability to use this product.
- G. This warranty is the only written warranty applicable to ADJ Products, LLC products, and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.

## MANUFACTURER'S LIMITED WARRANTY PERIODS:

- Non-LED Lighting Products = 1-Year (365 Days) (Including Special Effect Lighting, Intelligent Lighting, UV lighting, Strobos, Fog Machines, Bubble Machines, Mirror Balls, Par Cans, Trussing, Lighting Stands, Power/Data Distribution, etc. excluding LED and lamps)
- Laser Products = 1-Year (365 Days) (excluding laser diodes which have a 6-Month Limited Warranty)
- LED Products = 2-Year (730 Days) (excluding batteries which have a 180 Day Limited Warranty)
- NOTE: 2-Year (730 Days) Limited Warranty ONLY applies to product purchased within the United States. StarTec Series = 1-Year (365 Days) (excluding batteries which have a 180 Day Limited Warranty)
- ADJ DMX Controllers = 2 Year (730 Days)
- American Audio Products = 1 Year (365 Days)

# WARRANTY REGISTRATION

Please fill out the enclosed warranty card to validate your purchase. All returned service items, whether under warranty or not, must be freight pre-paid and accompanied by a return authorization (R.A.) number. The R.A. number must be clearly written on the outside of the return package. A brief description of the problem as well as the R.A. number must also be written down on a piece of paper included in the shipping carton. If the unit is under warranty, you must provide a copy of your proof of purchase invoice. You may obtain an R.A. number by contacting our customer support team. All packages returned to the service department not displaying an R.A. number on the outside of the package will be returned to the shipper.

## FEATURES

- 36 DMX channels
- Designed to operate RGBAL+UV HEX Series LED products
- Dedicated fixture control buttons
- 24 pre-programmed color macro buttons
- 6 user-programmable color preset buttons
- 6 multi-function channel faders
- 8 versatile function buttons
- USB-C charging port for phones or tablets

## INCLUDED ITEMS

- Power Cable (x1)

# **SAFETY PRECAUTIONS**



**PROTECTION CLASS 1 - FIXTURE MUST BE PROPERLY GROUNDED.**



**THERE ARE NO USER SERVICEABLE PARTS INSIDE THIS UNIT. DO NOT ATTEMPT ANY REPAIRS YOURSELF, AS DOING SO WILL VOID YOUR MANUFACTURER'S WARRANTY. DAMAGES RESULTING FROM MODIFICATIONS TO THIS FIXTURE AND/OR THE DISREGARD OF SAFETY INSTRUCTIONS AND GUIDELINES IN THIS MANUAL VOID THE MANUFACTURER'S WARRANTY AND ARE NOT SUBJECT TO ANY WARRANTY CLAIMS AND/OR REPAIRS.**



**DO NOT PLUG FIXTURE INTO A DIMMER PACK!  
NEVER OPEN THIS FIXTURE WHILE IN USE!  
UNPLUG POWER BEFORE SERVICING FIXTURE!  
NEVER TOUCH FIXTURE DURING OPERATION, AS IT MAY BE HOT!  
KEEP FLAMMABLE MATERIALS AWAY FROM FIXTURE!**



**NEVER LOOK DIRECTLY INTO THE LIGHT SOURCE!  
RETINA INJURY RISK - MAY INDUCE BLINDNESS!  
SENSITIVE PERSONS MAY SUFFER AN EPILEPTIC SHOCK!**



**INDOOR / DRY LOCATIONS USE ONLY!  
DO NOT EXPOSE FIXTURE TO RAIN AND/OR MOISTURE!**




**AMBIENT OPERATING TEMPERATURE IS -4°F TO 104°F (-20°C TO 40°C)**

# SAFETY PRECAUTIONS

- ***Ambient operating temperature range is -4°F to 104°F (-20°C to 40°C)!***
- DO NOT expose to rain or moisture, or spill liquids into or onto the device! Any damage resulting from these conditions may void the manufacturer's warranty.
- Disconnect the power before servicing.
- DO NOT shake the device, and avoid brute force when installing and/or operating the device.
- DO NOT operate the device if the power cord has become frayed, crimped and/or damaged. If the power cord is damaged, replace immediately with a new one of the same power rating.
- DO NOT attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in case of an internal short.
- DO NOT attempt to operate this unit if it has been damaged in any way.
- Disconnect from main power before making any type of connection.
- DO NOT block any air ventilation slots. All fan and air inlets must remain clean and never blocked. Allow approx. 1.5 feet (0.5m) between device and other devices or a wall for proper cooling.
- Always be sure to mount this unit in an area that will allow proper ventilation. Allow about 1.5 feet (0.5m) between this device and a wall.
- DO NOT remove the cover for any reason.
- Never plug this unit in to a dimmer pack.
- During long periods of non-use, disconnect the unit's main power.
- Always mount this unit in safe and stable matter.
- Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to the point where they exit from the unit.
- Cleaning - The device should be cleaned only as recommended by the manufacturer.
- Heat - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- The device should be serviced by qualified service personnel when:
  - A. The power-supply cord or the plug have been damaged.
  - B. Objects have fallen onto, or liquids have been spilled into, the device.
  - C. The device does not appear to operate normally or exhibits a marked change in performance.
  - D. The device has fallen and/or has been subjected to extreme handling.



# OVERVIEW

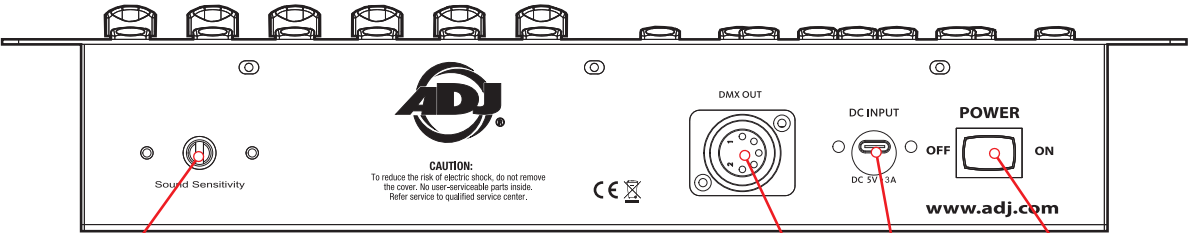


Sound Sensitivity Control

DMX Out

Power In

Power Switch

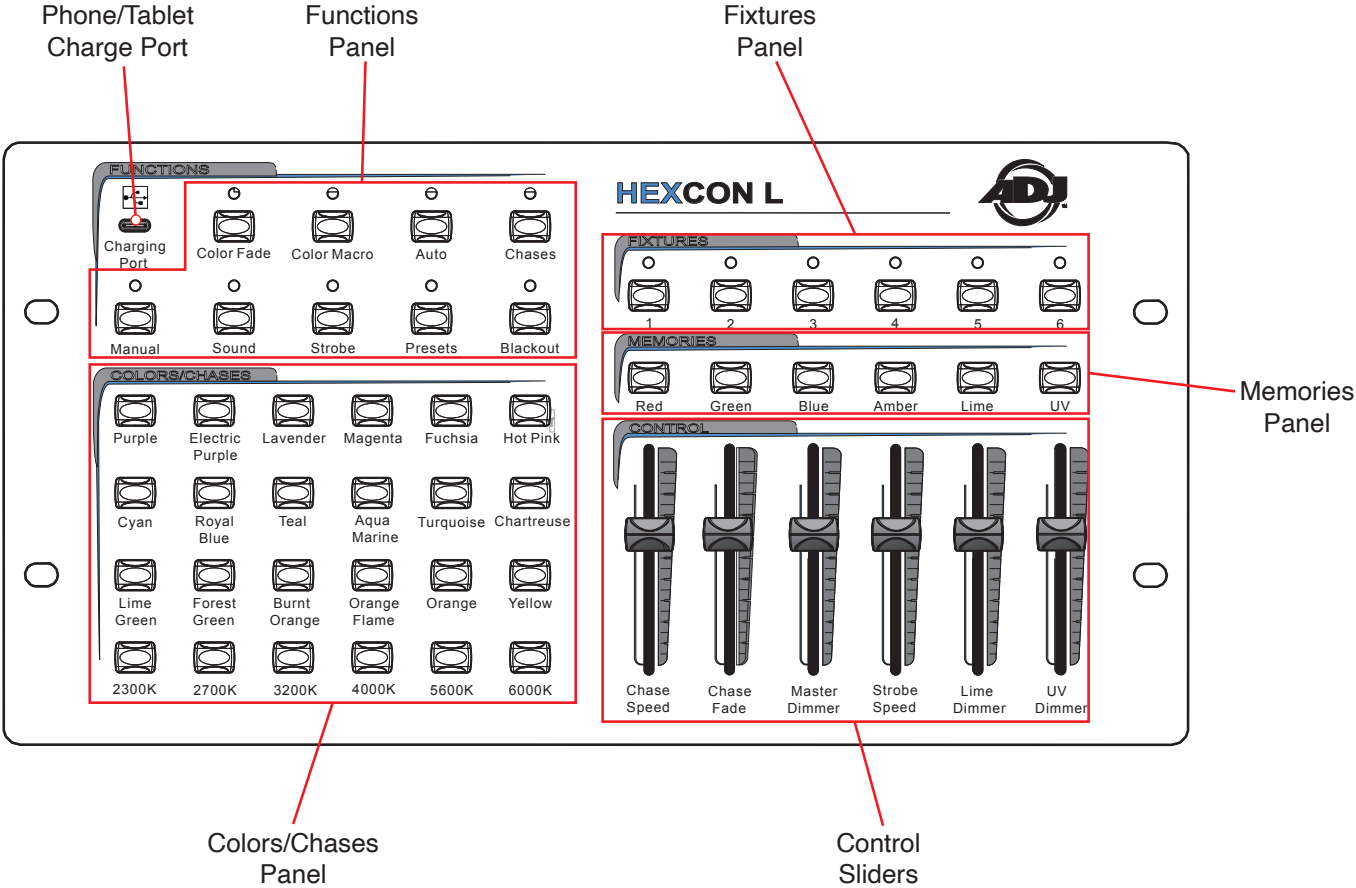

Colors/Chases Panel

Control Sliders

Memories Panel

# INSTALLATION GUIDELINES



**DO NOT INSTALL THE DEVICE IF YOU ARE NOT QUALIFIED TO DO SO!**

Device **MUST** be installed following all local, national, and country commercial electrical and construction codes and regulations.


When installing the device, the area of installation must be able to hold 10 times the weight of the unit and any attached accessories without any deformation.

Maximum ambient operating temperature range is **-4°F to 104°F (-20°C to 40°C)**. Do not operate this device when ambient temperature falls outside of this range.

Device(s) should be installed away from walking paths, seating areas, or areas where unauthorized personnel might reach the fixture by hand.

## WALL MOUNTING

Alternately, the device can be wall mounted using the two (2) mounting holes on the back of the unit. Always ensure that both the mounting surface and the mounting hardware are capable of safely supporting the weight of the device and any attached accessories.

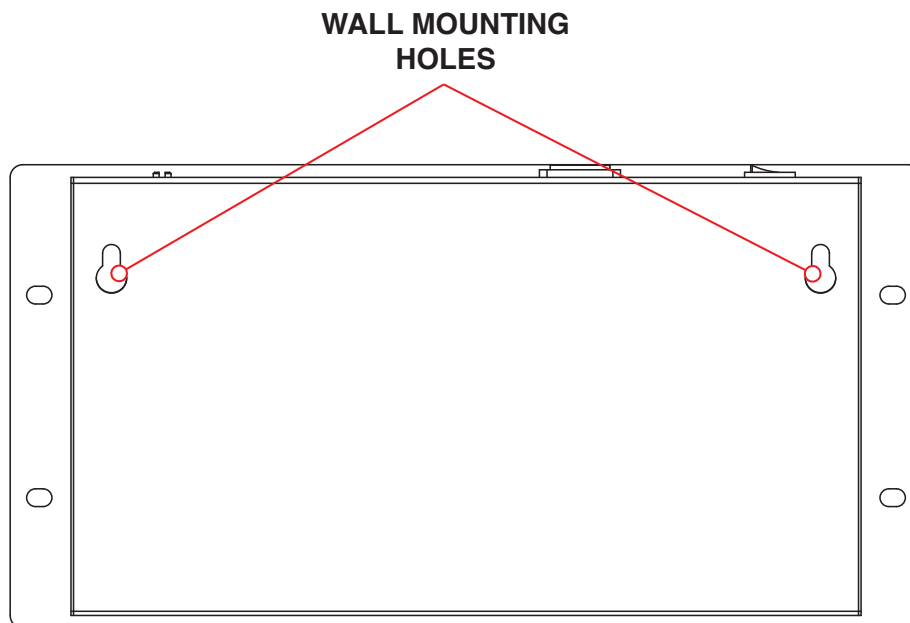


# DMX SET UP

**DMX-512:** DMX is short for Digital Multiplex. This is a universal protocol used as a form of communication between intelligent fixtures and controllers. A DMX controller sends DMX data instructions from the controller to the fixture. DMX data is sent as serial data that travels from device to device via the DATA “IN” and DATA “OUT” XLR terminals located on all DMX fixtures (most controllers only have a DATA “OUT” terminal).



**DMX Linking:** DMX is a language allowing all makes and models of different manufacturers to be linked together and operate from a single controller, as long as all fixtures and the controller are DMX compliant. To ensure proper DMX data transmission, try to use the shortest cable path possible when linking several DMX fixtures. The order in which fixtures are connected in a DMX line does not influence the DMX addressing. For example, a fixture assigned a DMX address of 1 may be placed anywhere in a DMX line: at the beginning, at the end, or anywhere in the middle. When a fixture is assigned a DMX address of 1, the DMX controller knows to send DATA assigned to address 1 to that unit, no matter where it is located in the DMX chain.

**Data Cable (DMX Cable) Requirements (For DMX Operation):** This unit can be controlled via DMX-512 protocol. The DMX address is set on the rear panel of the unit. Your unit and your DMX controller require a standard 5-pin XLR connector for data input and data output. We recommend Accu-Cable DMX cables. If you are making your own cables, be sure to use standard 110-120 Ohm shielded cable (This cable may be purchased at almost all pro lighting stores). Your cables should be made with a male XLR connector at one end and a female XLR connector at the other. Also remember that DMX cable must be daisy chained and cannot be split.

**Notice:** Be sure to follow the illustration below when making your own cables. Do not use the ground lug on the XLR connector. Do not connect the cable’s shield conductor to the ground lug or allow the shield conductor to come in contact with the XLR’s outer casing. Grounding the shield could cause a short circuit and erratic behavior.

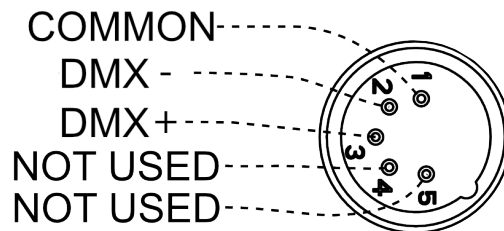

**Special Note: Line Termination.** When longer runs of cable are used, you may need to use a terminator on the last unit to avoid erratic behavior. A terminator is a 110-120 ohm 1/4 watt resistor which is connected between pins 2 and 3 of a male XLR connector (DATA + and DATA -). This unit is inserted in the female XLR connector of the last unit in your daisy chain to terminate the line. Using a cable terminator (ADJ part number Z-DMX/T) will reduce the risk of erratic behavior.

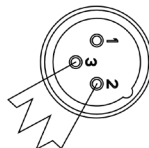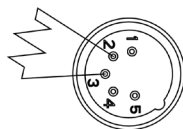

A DMX512 terminator reduces signal errors, avoiding most signal reflection interference. Connect PIN 2 (DMX-) and PIN 3 (DMX+) of the last fixture in series with a 120 Ohm, 1/4 W Resistor to terminate the DMX512.

# DMX SETUP

## CONFIGURING FIXTURES FOR CONTROL

All fixtures should be set to operate in DMX mode. Assign a DMX address to each fixture, with the starting DMX address of the first unit set to 1, the second unit to 7 (1 + 6), the third unit to 13 (1 + 6 + 6), and so on.

Ensure that the fixtures are set up to operate according to the DMX protocol shown below:

| CHANNEL | DMX VALUE | FUNCTION             |
|---------|-----------|----------------------|
| 1       | 000 - 255 | Red, dim to bright   |
| 2       | 000 - 255 | Green, dim to bright |
| 3       | 000 - 255 | Blue, dim to bright  |
| 4       | 000 - 255 | Amber, dim to bright |
| 5       | 000 - 255 | Lime, dim to bright  |
| 6       | 000 - 255 | UV, dim to bright    |

## SELECTING FIXTURES

This device has the capability to control up to 6 HEX RGBAL+UV LED fixtures.

- Press the buttons labeled 1-6 on the Fixture section of the device to select which fixtures to control.
- LEDs located above each button will illuminate to indicate when a fixture has been selected.
- To de-select a fixture, press the numbered button assigned to that fixture again, and the LED will turn off to indicate that the fixture is no longer being controlled.

# OPERATION

## COLOR FADE MODE

On the Functions Panel, locate the button marked “Color Fade”. Press the button, and the LED above it will illuminate to indicate that this mode has been enabled. In this mode, the controls are as follows:

- **Chase Speed Fader:** Adjusts speed, from slow to fast.
- **Chase Fade Fader:** Adjusts fade time, fast to slow.
- **Master Dimmer Fader:** Adjusts overall brightness.
- **Lime Dimmer Fader:** Adjusts brightness of lime output only.
- **UV Dimmer Fader:** Adjusts intensity of UV output only.

## AUTO RUN MODE

On the Functions Panel, locate the button marked “Auto”. Press the button, and the LED above it will illuminate to indicate that this mode has been enabled. In this mode, the controls are as follows:

- **Chase Speed Fader:** Adjusts speed, from slow to fast.
- **Chase Fade Fader:** Adjusts fade time, fast to slow.
- **Master Dimmer Fader:** Adjusts overall brightness.
- **Lime Dimmer Fader:** Adjusts brightness of lime output only.
- **UV Dimmer Fader:** Adjusts intensity of UV output only.

## COLOR MACROS MODE

On the Functions Panel, locate the button marked “Color Macro”. Press the button, and the LED above it will illuminate to indicate that this mode has been enabled. In this mode, the controls are as follows:

- **Colors/Chases Panel and Memories Panel:** Use to select colors or saved presets.
- **Chase Speed Fader:** Adjusts color selection.
- **Chase Fade Fader:** Adjusts fade time.
- **Master Dimmer Fader:** Adjusts overall brightness.
- **Lime Dimmer Fader:** Adjusts brightness of lime output only.
- **UV Dimmer Fader:** Adjusts intensity of UV output only.

## CHASES MODE

On the Functions Panel, locate the button marked “Chases”. Press the button, and the LED above it will illuminate to indicate that this mode has been enabled. In this mode, the controls are as follows:

- **Colors/Chases Panel and Memories Panel:** Use to select built-in chase programs.
- **Chase Speed Fader:** Adjusts chase speed.
- **Chase Fade Fader:** Adjusts fade time.
- **Master Dimmer Fader:** Adjusts overall brightness.
- **Lime Dimmer Fader:** Adjusts brightness of lime output only.
- **UV Dimmer Fader:** Adjusts intensity of UV output only.

## SOUND ACTIVE MODE

On the Functions Panel, locate the button marked “Sound”. Press the button, and the LED above it will illuminate to indicate that this mode has been enabled. In this mode, the controls are as follows:

- **Sound Sensitivity Knob (rear panel):** Use to adjust sound sensitivity.
- **Chase Speed Fader:** Use to fine tune sound sensitivity.
- **Chase Fade Fader:** Adjusts fade time.
- **Master Dimmer Fader:** Adjusts overall brightness.
- **Lime Dimmer Fader:** Adjusts brightness of lime output only.
- **UV Dimmer Fader:** Adjusts intensity of UV output only.

# OPERATION

## MANUAL COLOR MODE

On the Functions Panel, locate the button marked “Manual”. Press the button, and the LED above it will illuminate to indicate that this mode has been enabled. In this mode, the controls are as follows:

- **Colors/Chases Panel and Memories Panel:** Use to select static color.
- **Chase Speed Fader:** Adjusts brightness of red output only.
- **Chase Fade Fader:** Adjusts brightness of green output only.
- **Master Dimmer Fader:** Adjusts brightness of blue output only.
- **Strobe Speed Fader:** Adjusts brightness of amber output only.
- **Lime Dimmer Fader:** Adjusts brightness of lime output only.
- **UV Dimmer Fader:** Adjusts intensity of UV output only.

## PRESET MODE

On the Functions Panel, locate the button marked “Preset”. Press the button, and the LED above it will illuminate to indicate that this mode has been enabled. In this mode, the controls are as follows:

- **Creating and Saving Color Presets:** Use the buttons (1-6) in the Fixtures Panel to select the fixture or fixtures that the color preset will apply to, then use the six faders to adjust the color components as desired (colors are assigned to the faders as defined in the Manual Color Mode section). To save the setup, press and hold the desired button on the Memories Panel for 3 seconds. The LED above the Memories Panel button will flash twice to confirm that the setup has been successfully saved.
- **Recalling Presets:** Make sure the “Preset” button in the Functions Panel has been selected, then press the desired button on the Memories Panel to activate the preset assigned to that button.

## STROBE MODE

On the Functions Panel, locate the button marked “Strobe”. Press the button, and the LED above it will illuminate to indicate that this mode has been enabled. In this mode, use the **Strobe Speed Fader** to adjust the strobe rate, from slow to fast.

## BLACKOUT MODE

On the Functions Panel, locate the button marked “Blackout”. Press the button, and the LED above it will illuminate to indicate that this mode has been enabled. In this mode, all fixtures that are being controlled by this device will be blacked out.

## FACTORY RESET

To reset all device settings to factory default, press and hold the Red, Green, Blue, and Amber buttons on the Memories Panel. Switch the device power on while holding all four buttons down. The device will now reset to factory settings. ***Please note that this also resets any Presets saved to the Memories Panel buttons.***

# COLOR BUTTON VALUES

| COLOR NAME            | RED | GREEN | BLUE | AMBER | LIME | UV  |
|-----------------------|-----|-------|------|-------|------|-----|
| Aqua Marine           | 0   | 220   | 220  | 0     | 180  | 0   |
| Forest Green          | 0   | 255   | 50   | 0     | 150  | 0   |
| Royal Blue            | 30  | 50    | 255  | 0     | 0    | 0   |
| Orange Flame          | 255 | 80    | 0    | 200   | 180  | 0   |
| Lime Green            | 0   | 200   | 0    | 0     | 255  | 0   |
| Yellow                | 255 | 255   | 0    | 150   | 255  | 0   |
| Magenta               | 255 | 0     | 255  | 0     | 30   | 50  |
| Cyan                  | 0   | 255   | 255  | 0     | 50   | 0   |
| Orange                | 255 | 128   | 0    | 200   | 70   | 0   |
| Purple                | 180 | 0     | 255  | 0     | 50   | 80  |
| Electric Purple       | 80  | 0     | 255  | 0     | 50   | 200 |
| Turquoise             | 0   | 224   | 180  | 0     | 100  | 0   |
| Lavender              | 200 | 100   | 255  | 50    | 100  | 60  |
| Hot Pink              | 255 | 0     | 150  | 0     | 100  | 100 |
| Chartreuse            | 128 | 255   | 0    | 50    | 200  | 0   |
| Teal                  | 0   | 180   | 160  | 0     | 80   | 0   |
| Fuchsia               | 255 | 50    | 150  | 30    | 20   | 50  |
| Burnt Orange          | 255 | 90    | 0    | 180   | 60   | 0   |
| 2300K (Ultra Warm)    | 255 | 140   | 60   | 255   | 200  | 0   |
| 2700K (Warm White)    | 255 | 180   | 80   | 255   | 255  | 0   |
| 3200K (Tungsten)      | 255 | 200   | 100  | 220   | 255  | 0   |
| 4000K (Cool White)    | 220 | 230   | 180  | 150   | 255  | 0   |
| 5600K (Daylight)      | 180 | 240   | 240  | 100   | 255  | 0   |
| 6000K (Cool Daylight) | 140 | 255   | 255  | 60    | 255  | 0   |

# MAINTENANCE GUIDELINES



**DISCONNECT POWER BEFORE PERFORMING ANY MAINTENANCE!**

## CLEANING

Frequent cleaning is recommended to ensure proper function, optimized light output, and an extended life. The frequency of cleaning depends on the environment in which the fixture operates: damp, smoky, or particularly dirty environments can cause greater accumulation of dirt on the fixture's optics. Clean the external lens surface regularly with a soft cloth to avoid dirt/debris accumulation.

**NEVER** use alcohol, solvents, or ammonia-based cleaners.

## MAINTENANCE

Regular inspections are recommended to ensure proper function and extended life. There are no user serviceable parts inside this fixture. Please refer all other service issues to an authorized ADJ service technician. Should you need any spare parts, please order genuine parts from your local ADJ dealer.

Please refer to the following points during routine inspections:

- A. A detailed electrical check by an approved electrical engineer every three months, to make sure the circuit contacts are in good condition and prevent overheating.
- B. Be sure all screws and fasteners are securely tightened at all times. Loose screws may fall out during normal operation, resulting in damage or injury as larger parts could fall.
- C. Check for any deformations on the housing, color lenses, rigging hardware, and rigging points (ceiling, suspension, trussing). Deformations in the housing could allow for dust to enter into the fixture. Damaged rigging points or unsecured rigging could cause the fixture to fall and seriously injure a person(s).
- D. Electric power supply cables must not show any damage, material fatigue, or sediments.


**NEVER** remove the ground prong from the power cable.

# ORDERING INFORMATION

| SKU (US) | SKU (EU) | DESCRIPTION  |
|----------|----------|--------------|
| HEX136   | N/A      | ADJ Hexcon L |



DIMENSIONAL DRAWINGS

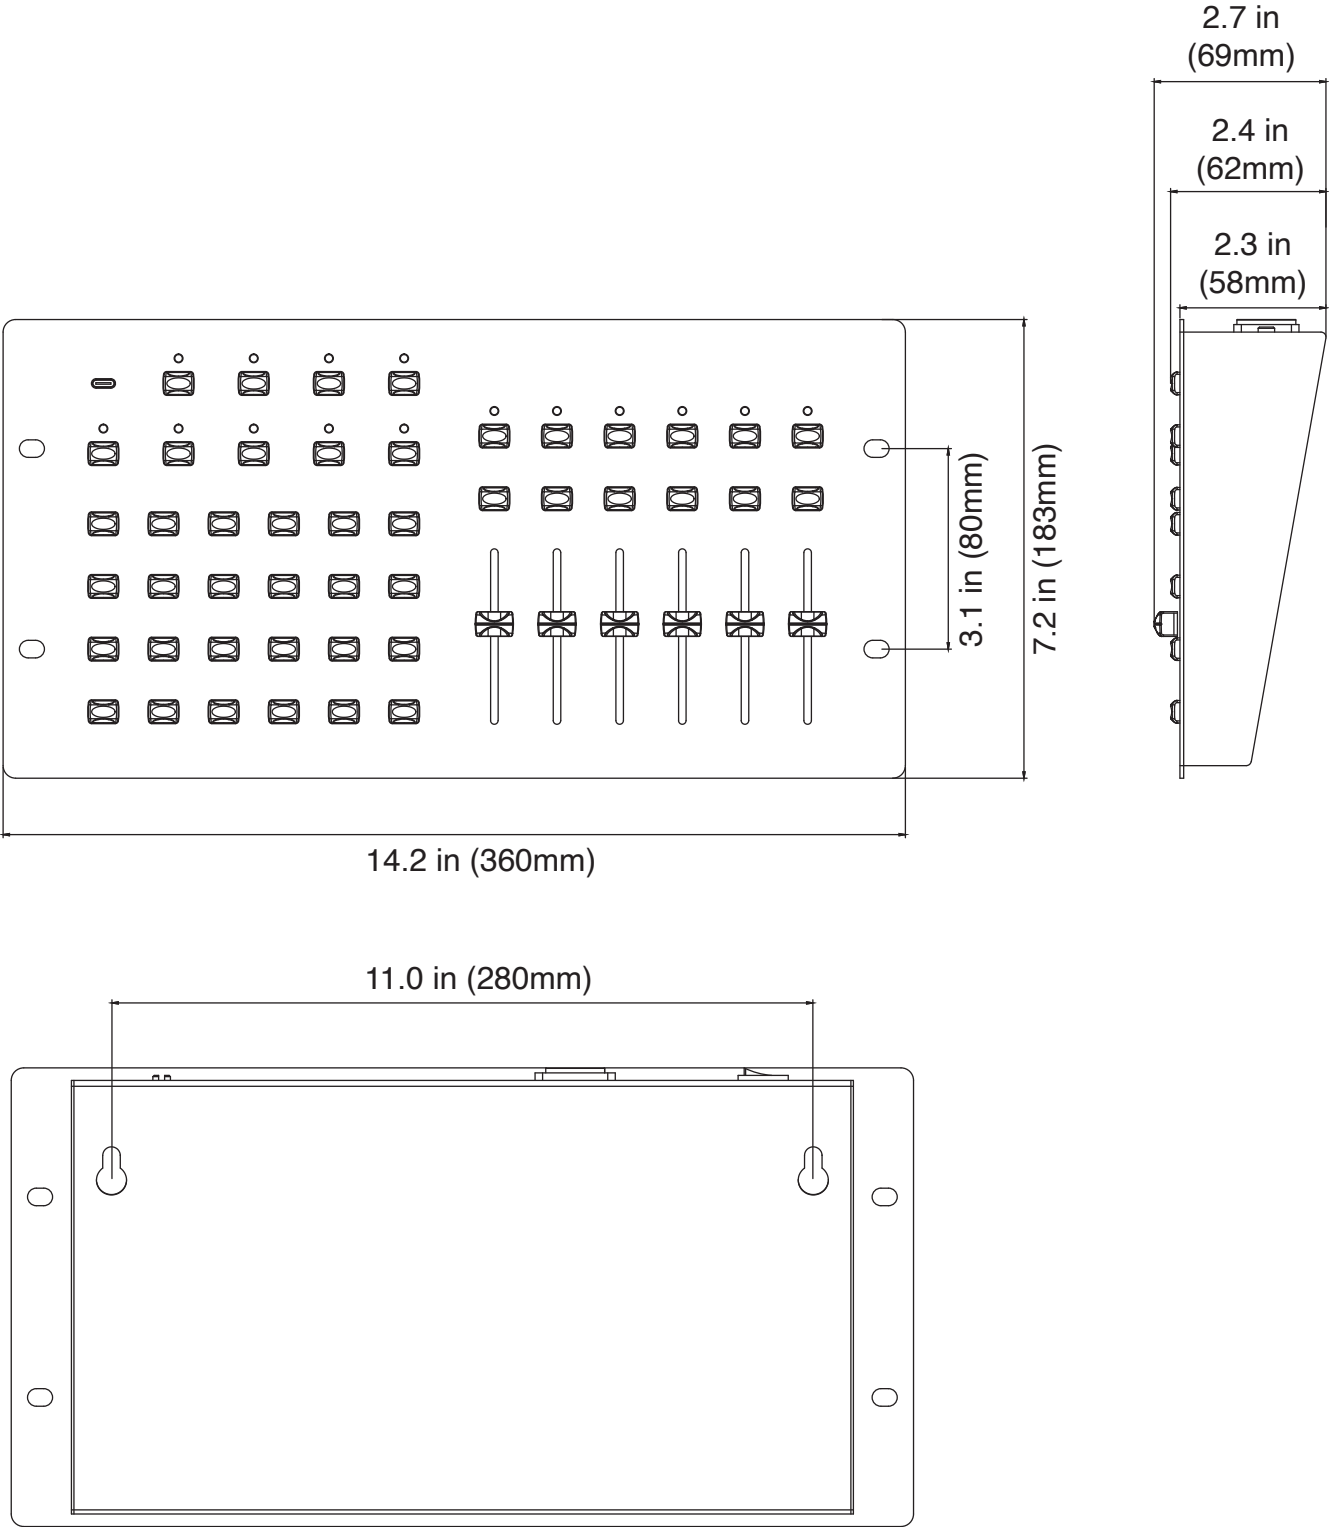

# SPECIFICATIONS

- Compact DMX controller for ADJ, RGBAL+UV, HEX series products
- Control up to 6 individual, RGBAL+UV LED fixtures or fixture groups
- 6 user programmable presets, direct access buttons
- 30 Color preset direct access buttons
- 6 multi-function faders
- Color Macro playback mode
- Manual RGBAL+UV intensity control mode
- Color Fade Mode, Color Chase Mode, Auto Run, Sound Active, and Strobe functions.
- On the fly Speed & Fade control of all chase programs
- Sound active mode via internal microphone
- Adjustable microphone sensitivity
- Variable strobe
- Blackout button
- DMX output connector: 5-pin XLR
- USB C Charging port (Charges most mobile phones and tablets)
- Power In: 5VDC 3A UL approved power supply (Included)
- Power consumption: 7.5 Watts
- Dimensions: 14.2" x 7.2" x 2.7" (360mm x 183mm x 69mm)
- Weight: 4lbs. (1.74kgs.)

## FCC STATEMENT

Please note that changes or modifications to this product that have not been expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

### **Energy Saving Matters (EuP 2009/125/EC)**

Saving electric energy is a key to help protecting the environment. Please turn off all electrical products when they are not in use. To avoid power consumption in idle mode, disconnect all electrical equipment from power when not in use. Thank you!



